




LOC/DME I-OGS	APP CRS	Rwy Idg	6035
110.7	269°	TDZE	302
Chan 44		Apt Elev	302


LOC RWY 27




OGDENSBURG INTL (OGS)

ADF required.		MISSED APPROACH: Climbing left turn to 2000 direct OGIVE LOM and hold.
	VDP NA when using Massena altimeter setting. When local altimeter setting not received, use Massena altimeter setting and increase all MDA 100 feet and S-LOC 27 and Circling visibility Cat C/D ¼ SM.	
AWOS-3 118.525		BOSTON CENTER 135.25 377.1
		UNICOM 122.8 (CTAF) 

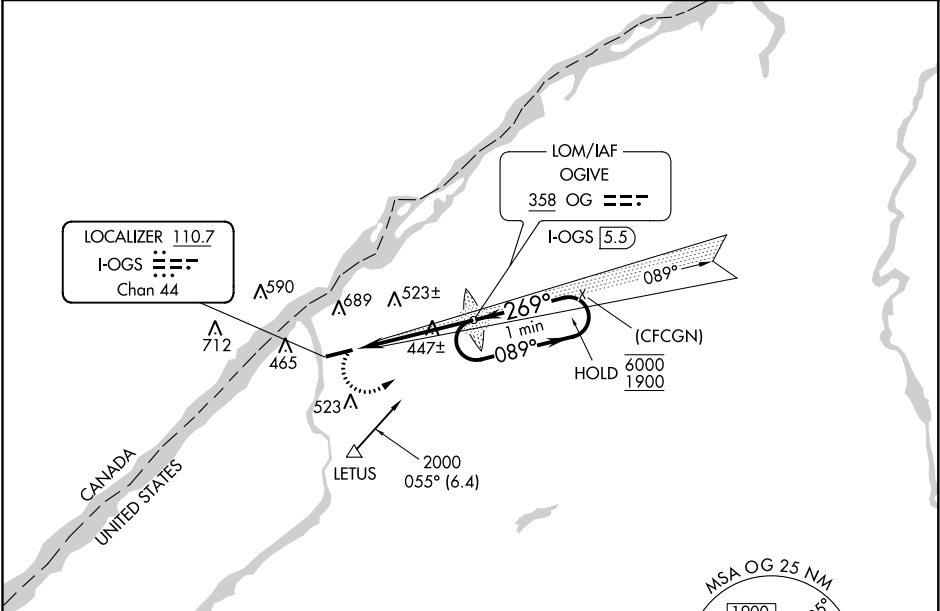

ELEV 302		TDZE 302
----------	---	----------

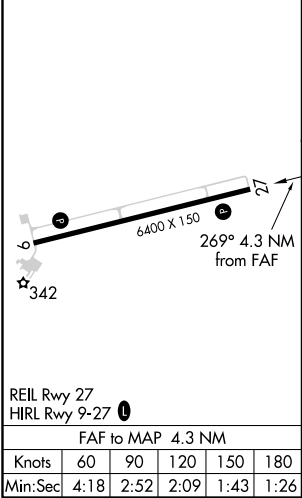

2000	OG	VGSi and descent angles not coincident (VGSi Angle 3.00/TCH 45).		OG LOM	One Minute Holding Pattern	
				I-OGS 5.5		
		I-OGS 2.4	1900	089° → 6000		
		I-OGS 1.2	269°	← 269° 1900		
		≤ 3.38° TCH 45				
		1.2	3.1 NM			
CATEGORY	A	B	C	D		
S-27	740-1	438 (500-1)	740-1¼	438 (500-1¼)		
 CIRCLING	760-1 458 (500-1)	1000-1 698 (700-1)	1000-2 698 (700-2)	1000-2¼ 698 (700-2¼)		