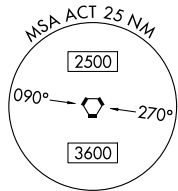


ILS or LOC RWY 19
WACO RGNL (ACT)

MISSED APPROACH: Climb to 1500 then climbing left turn to 4000 on ACT VORTAC R-164 to BOSEL 14 DME and hold, continue climb-in-hold to 4000.

UNICOM

1500 ↑	4000 ACT R-164	BOSEL △	WESLI INT I-ACT <u>17</u>	
*LOC only.		COFFI INT I-ACT <u>6.1</u>	2800	
*I-ACT <u>2.3</u> I-ACT <u>1.3</u>		2100	187° GS 3.00° TCH 55	
-1.1		3.8 NM	10.9 NM	
CATEGORY	A	B	C	D
S-ILS 19**	705/24 200 (200-½)			
S-LOC 19	900/24 395 (400-½)	900/35 395 (400-¾)		
C CIRCLING	940-1 424 (500-1)	980-1 464 (500-1)	1020-1½ 504 (600-1½)	1160-2 644 (700-2)