
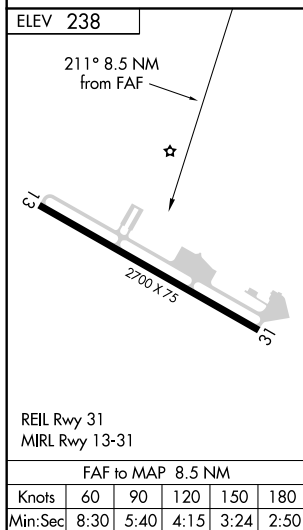


VOR/DME PUT <b>117.4</b> Chan <b>121</b>	APP CRS <b>211°</b>	Rwy Idg TDZE Apt Elev <b>238</b>	<b>N/A</b> <b>N/A</b> <b>238</b>
--	------------------------	---	--

VOR-A  
DANIELSON (LZD)

<p><b>NA</b></p>	<p>When local altimeter setting not received, use Willamantic altimeter setting. Procedure NA at night. Helicopter visibility reduction below 1 SM NA.</p>	<p>MISSED APPROACH: Climbing right turn to 2600 direct PUT VOR/DME and hold.</p>
------------------	--	--

AWOS-3 <b>119.125</b>	IJD ASOS <b>133.675</b>	PROVIDENCE APP CON ★ <b>123.675 244.875</b>	UNICOM <b>123.0 (CTAF)</b>
--------------------------	----------------------------	--	-------------------------------

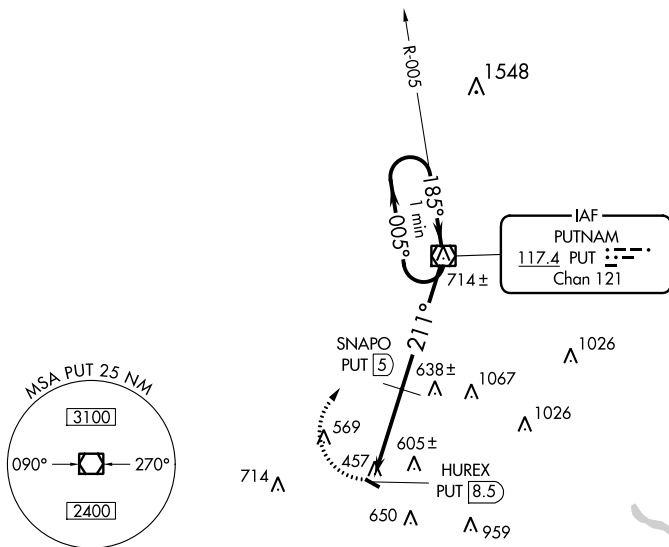

2600		PUT		PUT VOR/DME		One Minute Holding Pattern	
		HUREX PUT 8.5					
		SNAPO PUT 5					
		1120		211°			
		3.5 NM		5 NM		005° → 2600 ← 185°	
CATEGORY	A		B		C		D
CIRCLING	1120-1¼		882 (900-1¼)		NA		
SNAPO FIX MINIMUMS							
CIRCLING	900-1 662 (700-1)		980-1¼ 742 (800-1¼)		NA		