
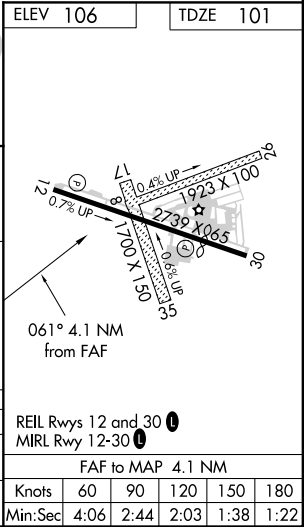
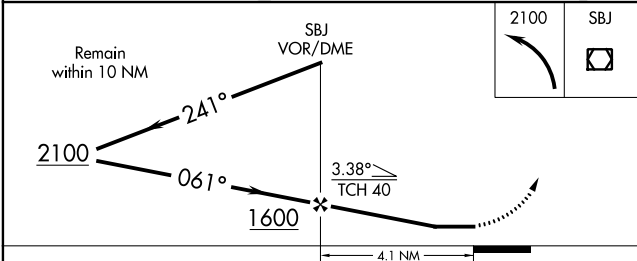


VOR/DME SBJ	APP CRS	Rwy Idg	1923
112.9	061°	TDZE	101
Chan 76		Apt Elev	106

VOR RWY 8  
SOMERSET (SMQ)

<p>▼ Helicopter visibility reduction below 1 SM NA. Procedure NA at night.</p> <p>▲ When local altimeter setting not received, use Morristown altimeter setting and increase all MDA 60 feet.</p>	MISSED APPROACH: Climbing left turn to 2100 direct SBJ VOR/DME and hold.
---	--

ASOS 120.6	NEW YORK APP CON 132.8 379.9	UNICOM 123.0 (CTAF)	118.325 0
---------------	---------------------------------	------------------------	-----------

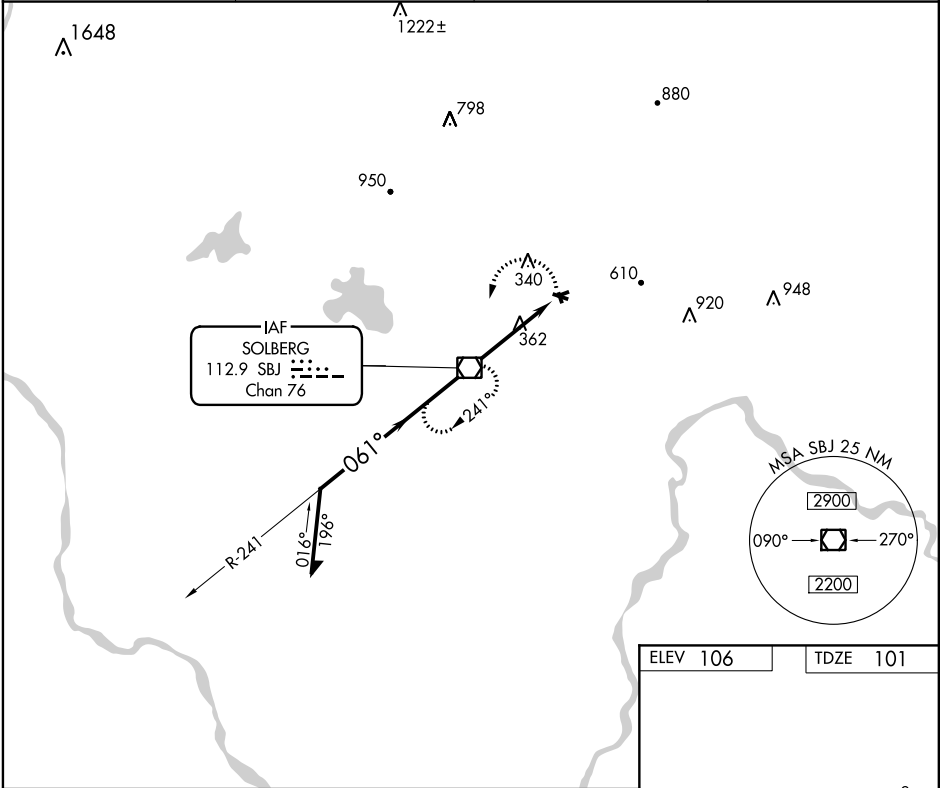

CATEGORY	A	B	C	D
S-8	700-1	599 (600-1)	NA	
CIRCLING	700-1 594 (600-1)	960-1¼ 854 (900-1¼)	NA	