
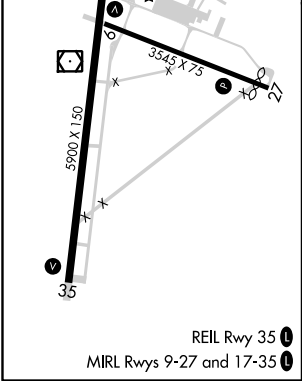


VOR/DME CVO	APP CRS	Rwy Idg	5900
115.4	177°	TDZE	248
Chan 101		Apt Elev	250

VOR RWY 17  
CORVALLIS MUNI (CVO)

DME required	MALSR	MISSED APPROACH: Climbing left turn to 3000 on CVO VOR/DME R-081 to SHEDD INT/EUG 22.1 DME and hold, continue climb-in-hold to 3000.
When local altimeter setting not received, procedure NA. For inop ALS, increase Cat C/D visibility to 1 3/4 SM.		

AWOS-3PT 135.775	CASCADE APP CON ★ 127.5 348.7	UNICOM 123.075 (CTAF)
---------------------	----------------------------------	--------------------------

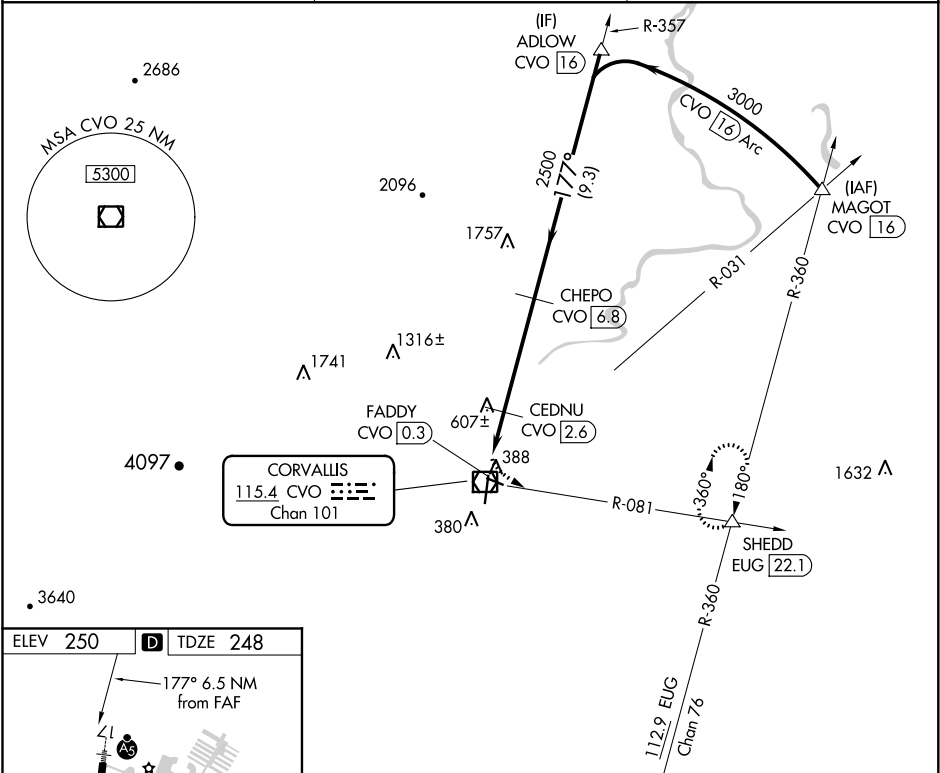

3000	SHEDD			ADLOW
CVO R-081		CEDNU	CHEPO	CVO 16
	CVO VOR/DME	CVO		
	FADDY			
	CVO			
	0.3	2.6	6.8	
	1.8 NM	0.6	4.1 NM	9.3 NM
CATEGORY	A	B	C	D
S-17	860-1/2	612 (700-1/2)	860-1 3/8	612 (700-1 3/8)
CIRCLING	860-1	610 (700-1)	920-1 3/4	1080-2 3/4
			670 (700-1 3/4)	830 (900-2 3/4)