

SRE NDB 278	APP CRS 162°	Rwy Idg TDZE Apt Elev	5004 1023 1023
-----------------------	------------------------	-----------------------------	---



NDB RWY 16

SEMINOLE MUNI (SRE)

Procedure NA at night. Circling NA to Rwy 5 and 23. Rwy 16 helicopter visibility reduction below 1 SM NA. When local altimeter setting not received, use Shawnee Rgnl altimeter setting and increase all MDAs 40 feet and increase Circling Cat C visibility ¼ SM.

MISSED APPROACH: Climb to 2000 then climbing left turn to 2600 direct SRE NDB and hold.

AWOS-3 118.625	FORT WORTH CENTER 132.2 338.35	UNICOM 122.8
--------------------------	--	------------------------

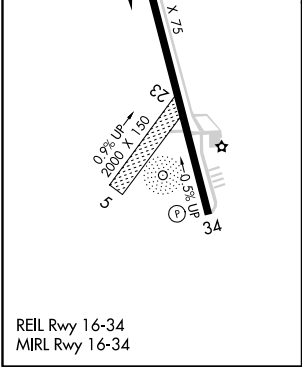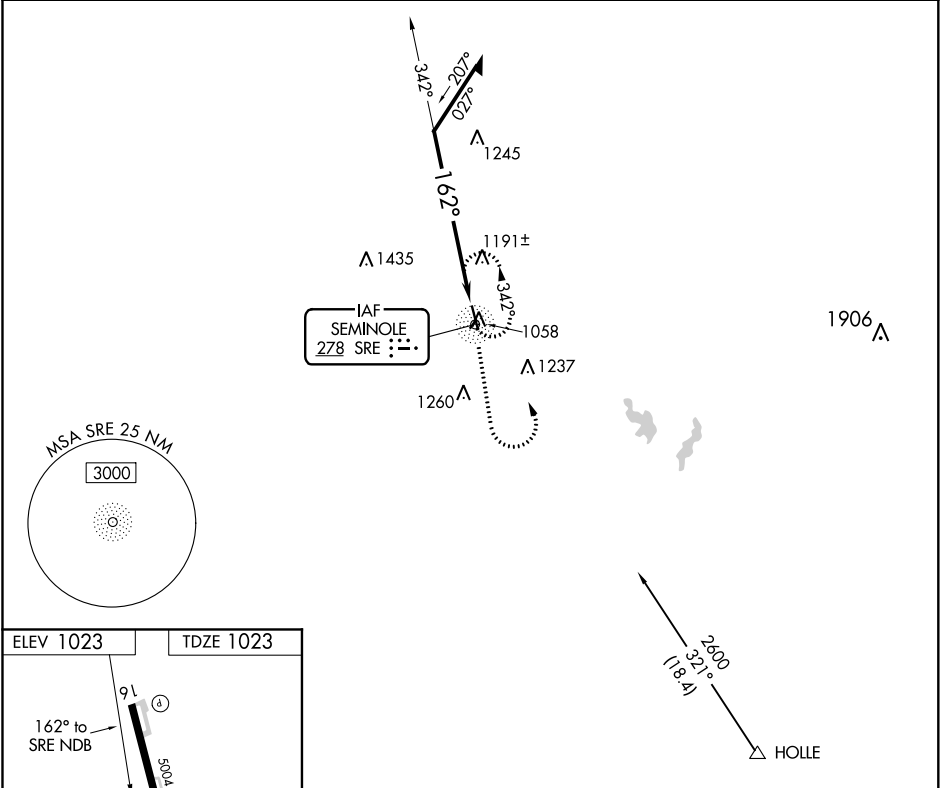

Remain within 10 NM

SRE NDB

2000

2600

342°

162°

2600

321° (18.4)

HOLLE

	2000	2600	SRE

CATEGORY	A	B	C	D
S-16	1660-1	637 (700-1)	1660-1¾ 637 (700-1¾)	NA
CIRCLING	1660-1	637 (700-1)	1660-1¾ 637 (700-1¾)	NA