

LOC I-CAE	APP CRS	Rwy Idg	8601
110.3	112°	TDZE	236
		Apt Elev	236


ILS or LOC RWY 11

COLUMBIA METROPOLITAN (CAE)

ALSIF-2

MISSED APPROACH: Climb to 1100 then climbing right turn to 2100 direct CAE VORTAC and hold.

ATIS	COLUMBIA APP CON	COLUMBIA TOWER	GND CON	CLNC DEL
120.15	133.4 285.6 (290°-109°) 124.15 338.2 (110°-289°)	119.5 257.8	121.9 348.6	119.75

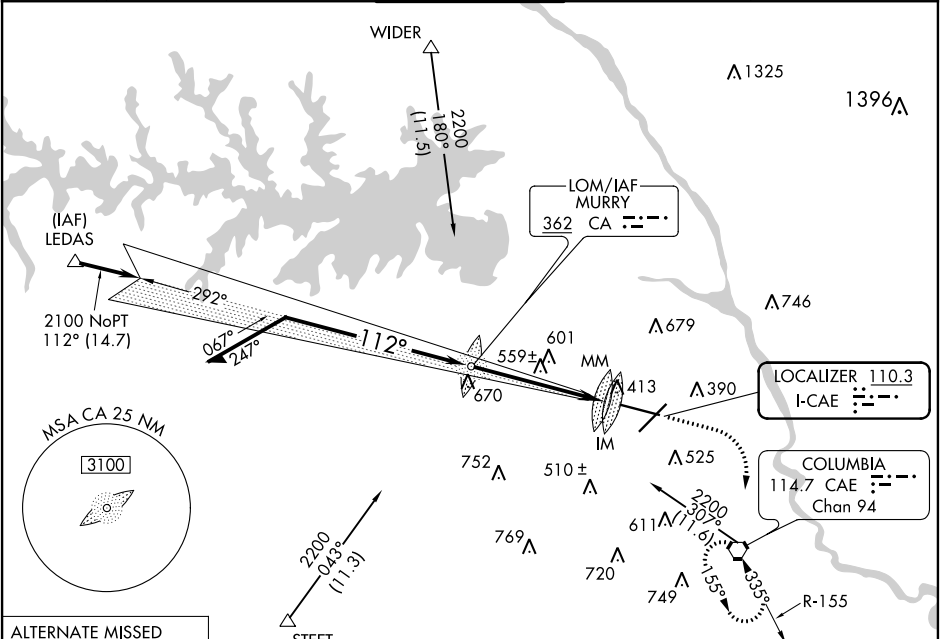

ALTERNATE MISSED APCH FIX

MURRY CA 362

ADF REQUIRED

1100

2100

CAE

ELEV 236 TDZE 236

REIL Rwy 23  
TDZ/CL Rwy 11  
HIRL Rwy 5-23 and 11-29

FAF to MAP 5.5 NM

Knots	60	90	120	150	180
Min:Sec	5:30	3:40	2:45	2:12	1:50