




VORTAC SAF <b>110.6</b> Chan <b>43</b>	APP CRS <b>158°</b>	Rwy Idg <b>N/A</b> TDZE <b>N/A</b> Apt Elev <b>6348</b>
--	------------------------	---

VOR/DME-A  
SANTA FE MUNI (SAF)

**T** When control tower closed, except for operators with approved weather reporting service, use Albuquerque altimeter setting.

**MISSED APPROACH:** Climb to 9000 direct SAF VORTAC and hold, continue climb-in-hold to 9000.

ATIS <b>128.55</b>	ALBUQUERQUE CENTER <b>132.8 346.35</b>	SANTA FE TOWER ★ <b>119.5 (CTAF) 0 239.3</b>	GND CON <b>121.7</b>	UNICOM <b>122.95</b>
-----------------------	---	---	-------------------------	-------------------------

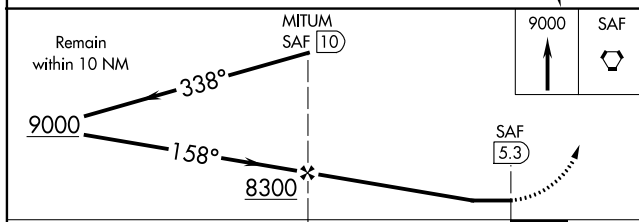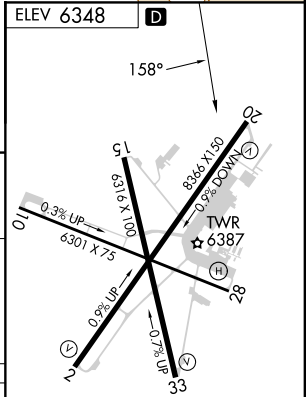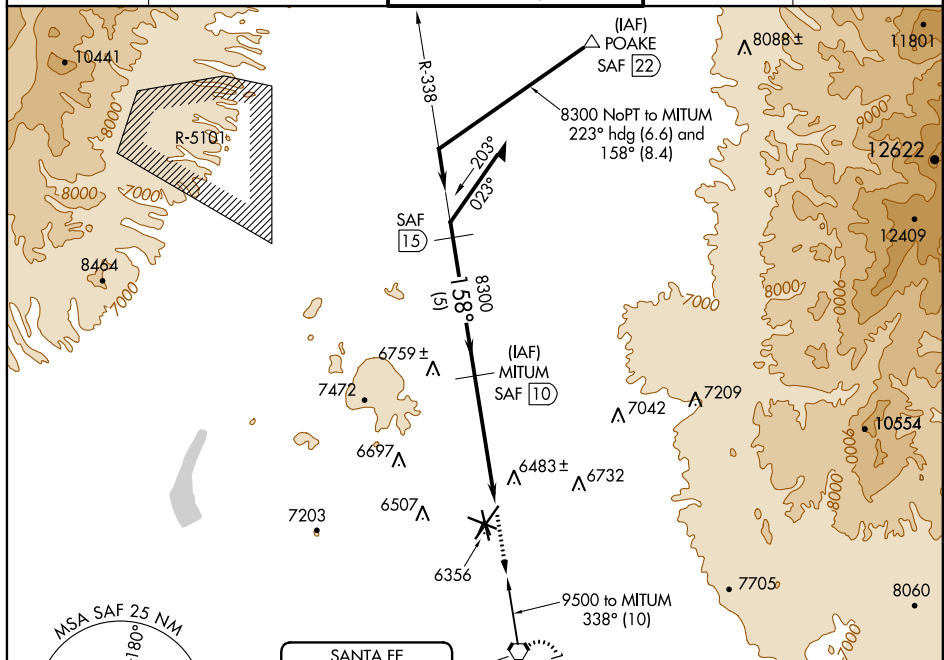

CATEGORY	A	B	C	D
CIRCLING	6960-1	612 (700-1)	6960-1½ 612 (700-1¾)	7020-2¼ 672 (700-2 ¼)
ALBUQUERQUE ALTIMETER SETTING MINIMUMS				
CIRCLING	7860-1¼ 1512 (1600-1¼)	7860-1½ 1512 (1600-1½)	7860-3 1512 (1600-3)	7920-3 1572 (1600-3)

REIL Rwys 10, 15, 20 and 33  
MIRL Rwys 2-20 and 15-33 **L**  
MIRL Rwy 10-28