

LOC/DME I-BXM <b>109.3</b> Chan <b>30</b>	APP CRS <b>012°</b>	Rwy Idg <b>8000</b> TDZE <b>63</b> Apt Elev <b>75</b>	ILS or LOC RWY 1R BRUNSWICK EXECUTIVE (BXM)
---	------------------------	---	--

▼


▲ NA

DME required. VDP NA when using Portland altimeter setting. When local altimeter setting not received, use Portland altimeter setting and increase S-ILS 1R DA to 314; increase all MDA 60 feet; increase S-LOC 1R Cats C/D visibilities ½ SM and Circling Cat C/D visibilities ¼ SM.

MALSR

MISSED APPROACH: Climb to 600 then climbing right turn to 3000 on heading 080° and AUG VOR/DME R-185 to GINNI INT/AUG 25.1 DME and hold.

AWOS-AV <b>134.875</b>	PORTLAND APP CON ★ (112°-292°) <b>119.75 269.35</b> (293°-111°) <b>120.4 299.2</b>	UNICOM <b>122.725</b> (CTAF) <b>0</b>
---------------------------	---	--

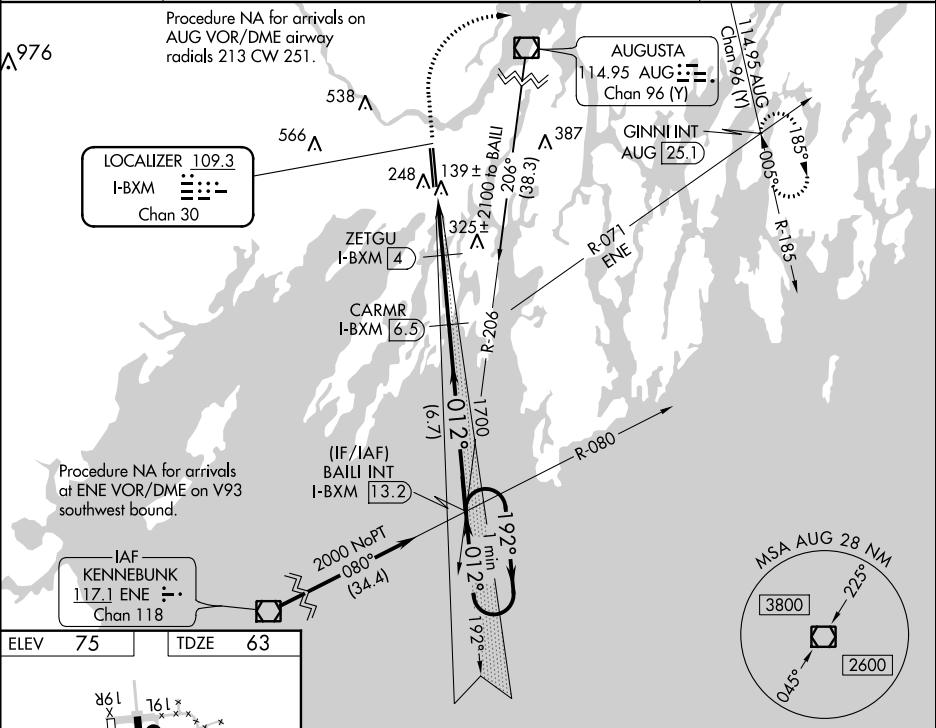

ELEV <b>75</b>	TDZE <b>63</b>	600	3000	AUG R-185	GINNI INT	CARMR I-BXM 6.5	BAILI INT I-BXM 13.2	One Minute Holding Pattern
* LOC only.								
* I-BXM 2.4								
I-BXM 1.5								
0.9 1.6 NM 2.5 NM 6.7 NM								
CATEGORY	A		B		C		D	
S-ILS 1R	263-½		200 (200-½)					
S-LOC 1R	400-½		337 (400-½)					
CIRCLING	560-1		485 (500-1)		840-2¼ 765 (800-2¼)		840-2½ 765 (800-2½)	